
Kensington®

VeriMark™ Guard Setup Guide

Kensington takes pride in making our comprehensive installation guides easy to follow with simple illustrations and step-by-step instructions. This guide will walk you through setup and help you get to know your VeriMark[™] Guard.

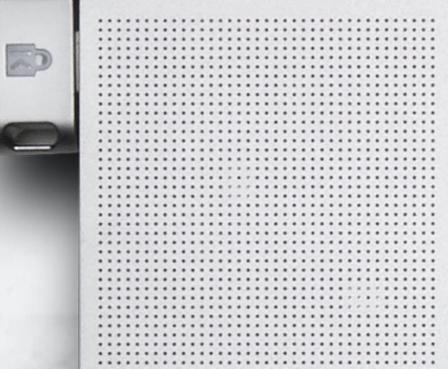







Please update operating system (Windows 10, Chrome OS and macOS) before setting up Verimark[™] Guard. If using an online service for WebAuthn make sure you use the latest browser version for (Edge, Chrome, Safari and Firefox.)

VeriMark[™] Guard Microsoft Edge Setup Guide

1. Select your account icon then click **Sign in** to login your Microsoft account

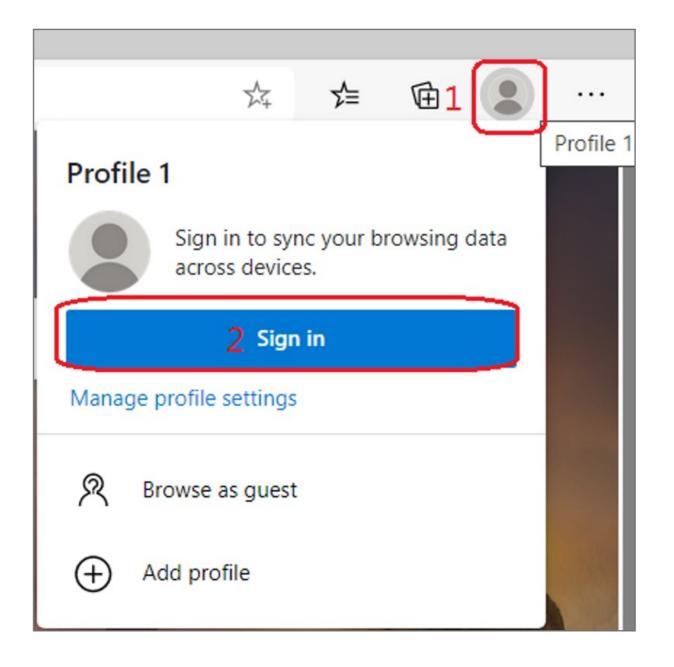

2. Choose your account then click **Continue** button

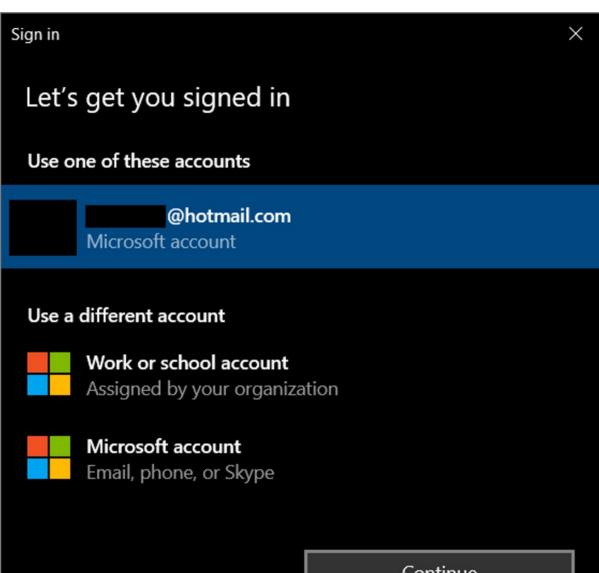


Continue	

3. Key in your email and password of Microsoft account

Sign in
Email, phone, or Skype
No account? Create one!
Sign in with Windows Hello or a security key 🥐
Sign-in options
Next

4. Select your account icon on the top right side of Edge, then click **Manage profile settings**

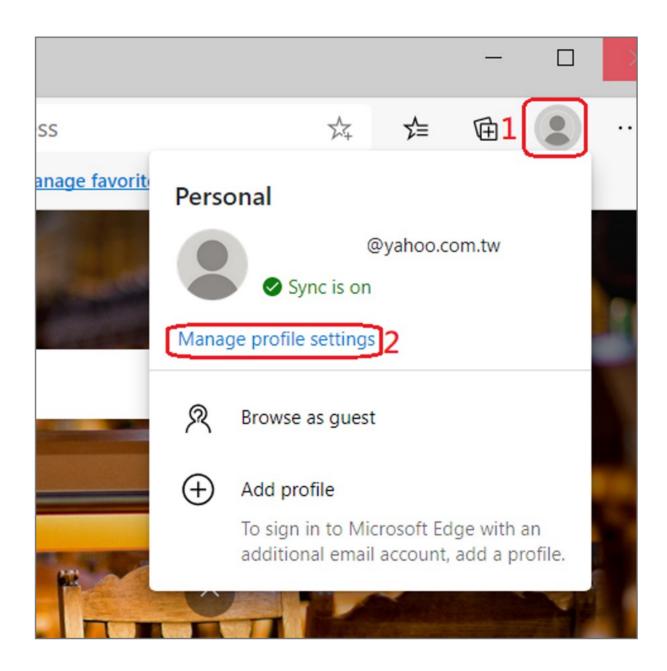

5. Select Profiles then click Manage account item

Settings	Your profile	+ Add profile
Search settings Frofiles 1 Privacy, search, and services	Personal The Not syncing	··· Sign out
Appearance	To sync your browser data, turn on sync.	
🕛 On startup		-
🚥 New tab page	2 A Manage account	Z
📴 Site permissions	C Sync	>


6. Key in your email address and password then click **Next**

Sign in
Email, phone, or Skype
No account? Create one!
Sign in with Windows Hello or a security key 🥐
Sign-in options
Next

7. Select Security icon

soft account	Your info	Privacy	Security	Rewa
		F	amily	
	S			
w x	P		V /	


8. Click More security options icon

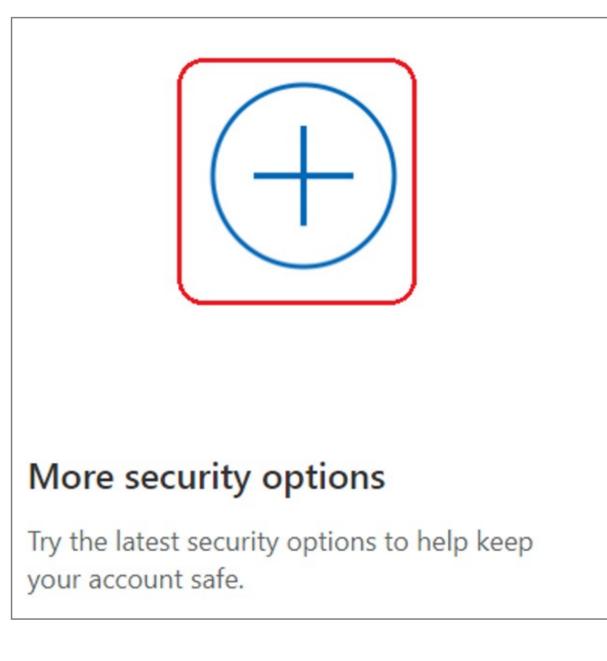


9. Select Set up Windows Hello item

Windows Hello and security keys		
Now you can sign in without a password using Windows Hello or security keys. A security key is a physical device (like a USB security key) that you can use to sign in to your account instead of a password. Learn more about signing in with Windows Hello or a security key.		
Set up a security key		
Set up Windows Hello		
Manage your sign-in methods		

10. Insert your fingerprint device into PC then select Next button

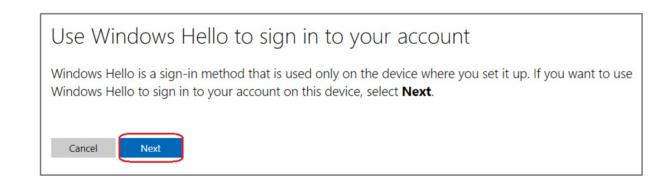

11. Touch your security key with your enrolled finger

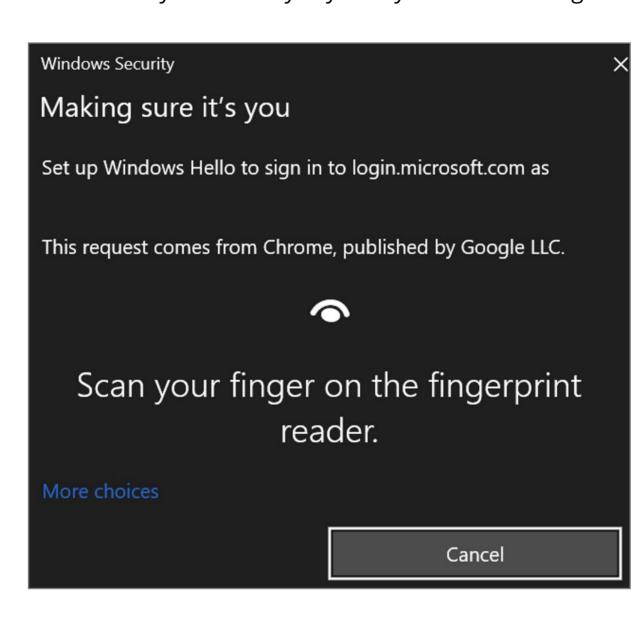

12. Setup the name of your fingerprint device, then click **Next**

Use Windows Hello to sign in to your account
Name your sign-in method
Hint: Name it based on your device so you'll know later which device this was on.
Example: "Personal Surface Book
Next


13. Fingerprint device setup has completed, click **Got it** button

You're all set!	
Next time you sign in, you can use Hello instead of your password to sign in.	
<u>Got it</u>	
Set up a security key	


How to Remove Security Key from Your Account

1. Sign in your Microsoft account

2. Select Security icon

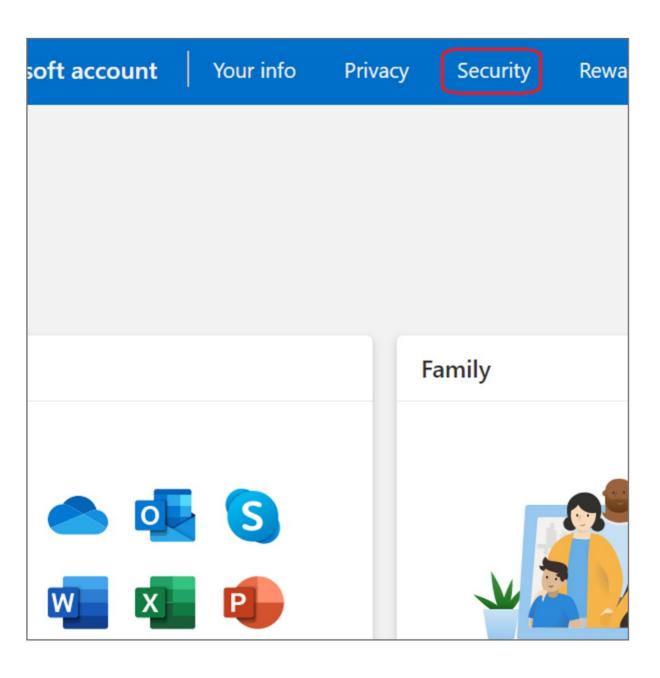

3. Click More security options icon

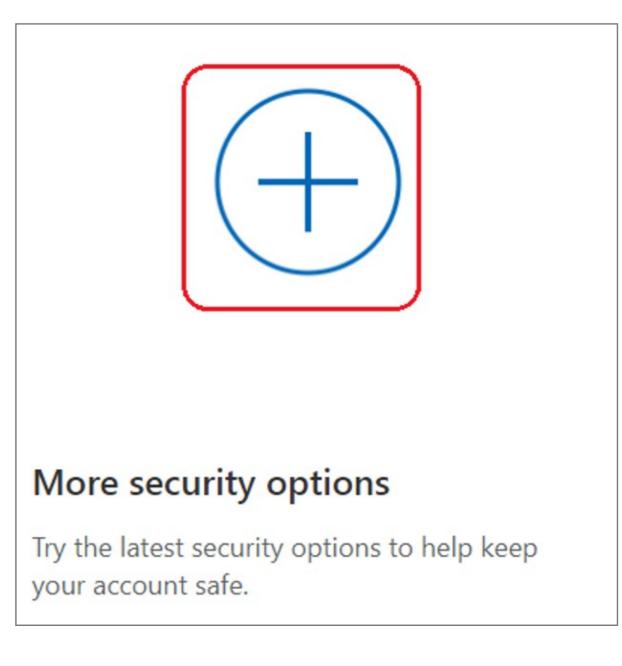

4. Click Manage your sign-in methods item

Windows Hello and security keys	
	Now you can sign in without a password using Windows Hello or security keys. A security key is a physical device (like a USB security key) that you can use to sign in to your account instead of a password. Learn more about signing in with Windows Hello or a security key.
	Set up a security key
	Set up Windows Hello
	Manage your sign-in methods

5. Select **Remove** button

your sign-in method	ls		
SIGN-IN METHODS	ADDED ON	LAST USED	
On-device key	10/5/2020 6:54 AM	10/5/2020 6:54 AM	Remove
	SIGN-IN METHODS	_	SIGN-IN METHODS ADDED ON LAST USED

6. Select **Remove** button

Remove Windows Hello?		
If you remove this, you won't be able to use it to sign in your account.		
Remove	Cancel	