



Please update operating system (Windows 10) before setting up Verimark™ Desktop. If using an online service for WebAuthn make sure you use the latest browser version (Edge, Chrome, Safari and Firefox.)


*Make sure Windows Hello has been previously configured using the instructions provided on the VeriMark support page.


VeriMark™ Desktop Microsoft 365 Setup Guide

1. Select **Sign in** icon to login your account

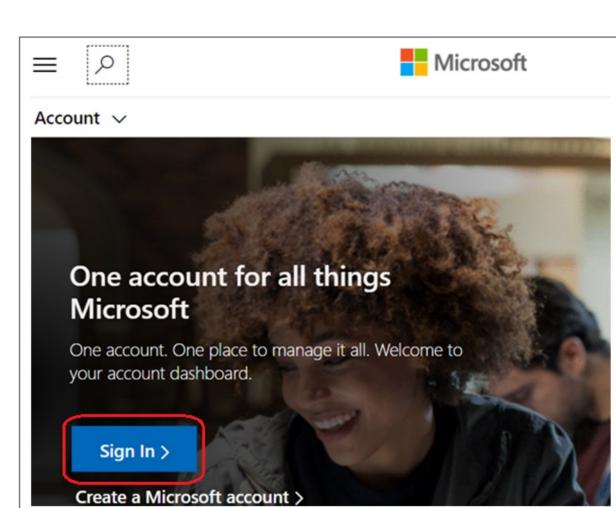

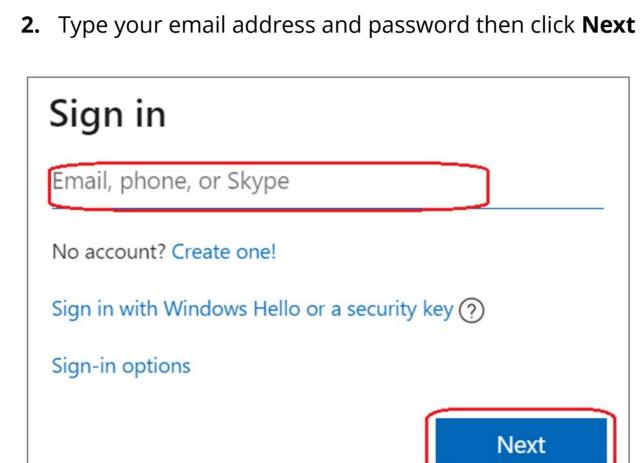

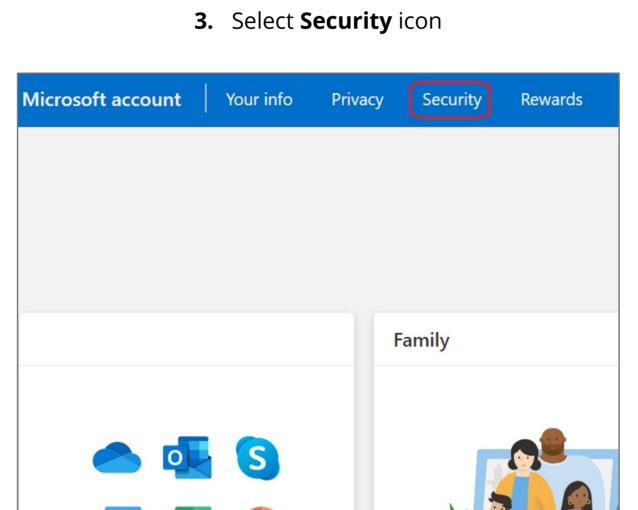


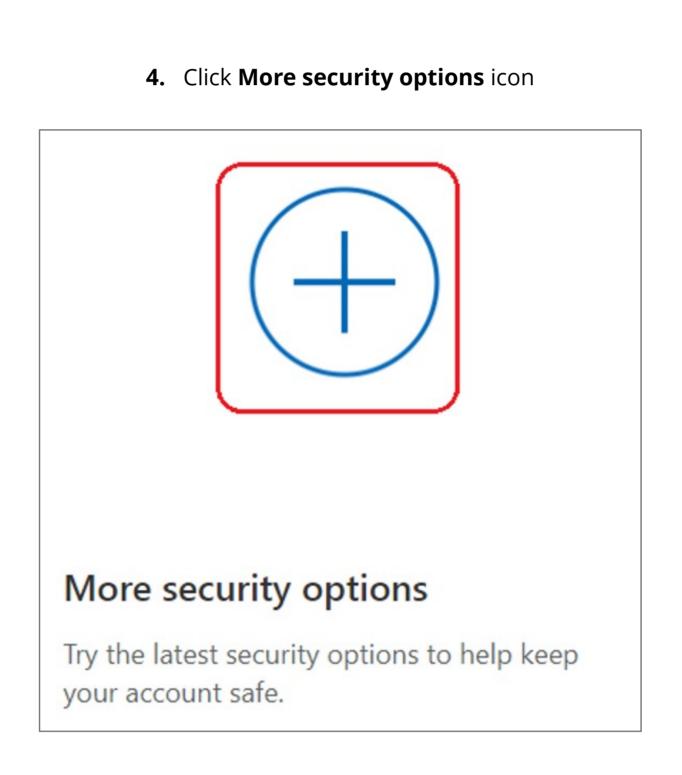


5. Select Set up Windows Hello

```
Windows Hello and security keys
Now you can sign in without a password using Windows Hello or security keys. A security key is a physical
device (like a USB security key) that you can use to sign in to your account instead of a password. Learn
more about signing in with Windows Hello or a security key.
Set up a security key
Set up Windows Hello
Manage your sign-in methods
```

6. Insert your fingerprint device into PC then select **Next** button Use Windows Hello to sign in to your account

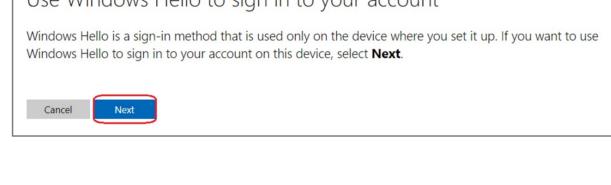


7. Touch your security key with your enrolled finger on Windows Hello set up Windows Security

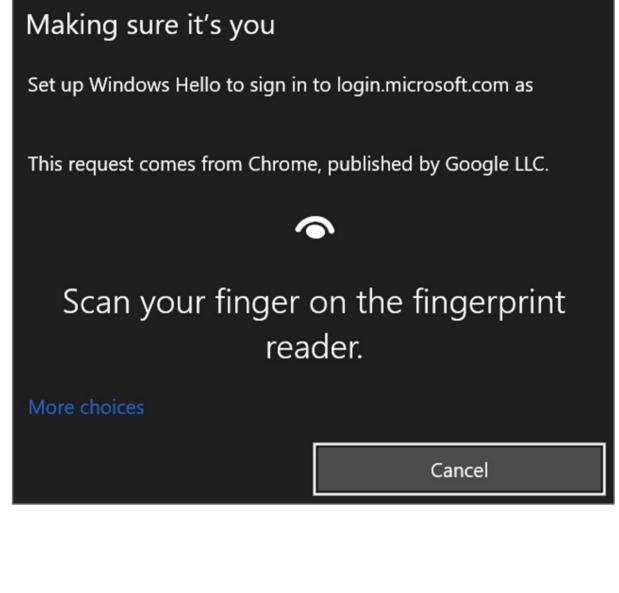

Use Windows Hello to sign in to your account

8. Setup the name of your fingerprint device, then click **Next**

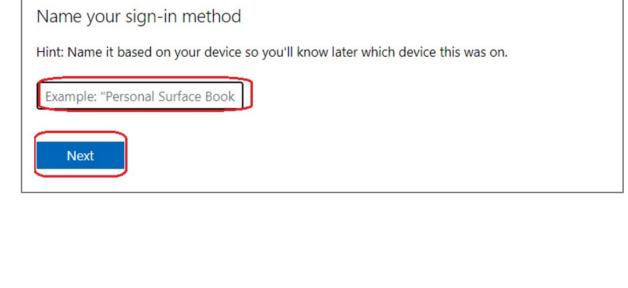

You're all set! Next time you sign in, you can use Hello instead of your password to sign in.

9. Fingerprint device setup has completed, click Got it button





2. Select **Security** icon

How to Remove Security Key from Your Account

1. Sign in to your Microsoft account

Microsoft account Your info Privacy Rewards

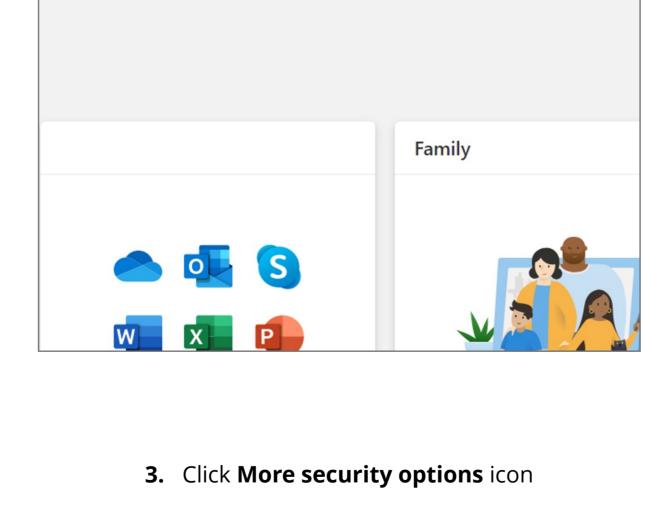

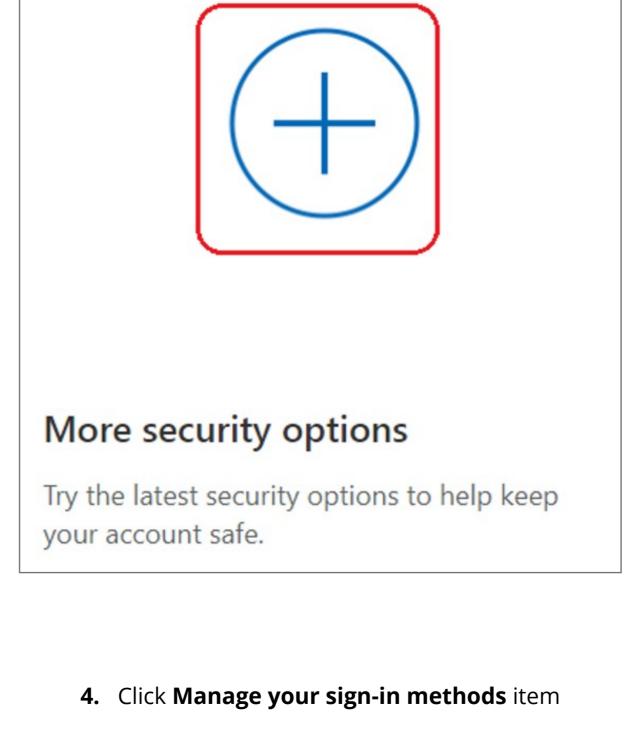



Manage your sign-in methods

Manage	your sign-in methods	S		
NAME	SIGN-IN METHODS	ADDED ON	LAST USED	
Gen1	On-device key	10/5/2020 6:54 AM	10/5/2020 6:54 AM	Remove

5. Select Remove button

6. Click Remove button

Remove Windows Hello? If you remove this, you won't be able to use it to sign in your account.

Cancel