Kensington

KensingtonWorks™

for	Windows
-----	---------

Version 2.1.8	Add Pro Fit Ergo Wired Mouse
	Add localisation strings for "Scroll Right" and "Scroll Left"
	Fix the localisation issue to detect from system locale
	Fix key chording bound for "Scroll Right" and "Scroll Left"
	Increase font size
	Fix "Minimise All" issue
1/8/2020	
Version 2.1.10	Fix issue where Helper can't be resumed when removed from startup menu
	Fix issue where Helper quits during uninstall process, before user's confirmation
	Fix single axis malfunction when using same modifier key with slow pointer
	Fix white that appears when changing resolution
	Fix UI partition that is incorrect under low resolution with 125% text size
	Add localisation to the KensingtonWorks driver download balloon message
	Add Ergo Vertical Wireless Mouse
	Update the image of the Ergo Wired Mouse
	Update Tutor images
1/9/2020	
Version 2.1.11	Update Win 7 BLE device hardware IDs and Win 7 driver
2/24/2020	
Version 2.1.13	Driver update: Add Bluetooth 3.0 HIDs for new dual-mode trackball/mouse
	Fix issue where erasing the cache file "Settings" will lose the bind to cloud record
	Fix Google Cloud login issue when user selects "Bind to Cloud"
2/25/2020	
Version 2.1.14	Feature change: Define "Second Drag Action" as "Drag Release"
	Change backup restore success message icon
3/20/2020	
Version 2.1.15	Add Track Scroll feature
	Remove TAU (test automation) commands "emulateButtonClick" and "emulateButtonPress" from release build, due to security concerns

Version 2.1.16	Update "Copyright © 2020 ACCO Brands LLC."	
	Add shortcuts for supported keys: backspace, down arrow, up arrow	
	Fix issue with single axis and slow pointer when setting a different modifier key	
5/15/2020		
Version 2.1.17	Fix post-keystroke bug for "Pro Tools"	
	Update translation json files for "ja" & "zh-TW". (Japan and Traditional Chinese)	
6/5/2020		
Version 2.1.18	Add navigation feature – "Auto Scroll"	
	i. Click button to enable "Auto Scroll"	
	ii. Click any button to disable "Auto Scroll"	
	iii. Two scroll directions: horizontal and vertical	
	iv. Move trackball to start "Auto Scroll" for 15 seconds (countdown starts from last movement of trackball);	
	v. During "Auto Scroll", slight/short" movement of the trackball will hold "Auto Scroll"	
	vi. During "Auto Scroll", normal movement of the trackball will change the direction of "Auto Scroll"	
	vii. Limitation: for application-specific setting of "Auto Scroll", "Track Scroll" can't be disabled by switching to another application until a trackball button is clicked	
	Change UI flow:	

if a single trackball is connected

i. When launching KensingtonWorks, go to the configure trackball page directly

ii. Go to the configure trackball page when a new trackball is plugged in



