




VeriMark™ Desktop Windows 10 Setup Guide


## 1. Select and click the **START** icon and select **Settings**

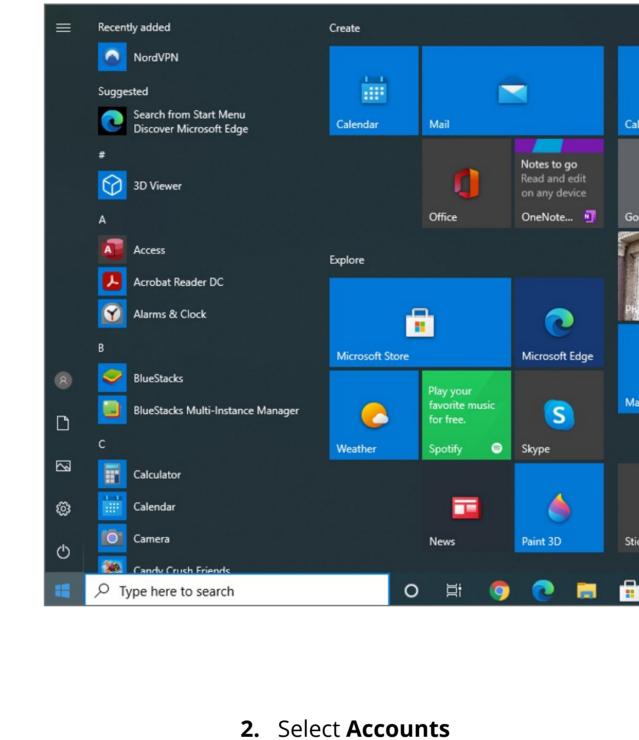

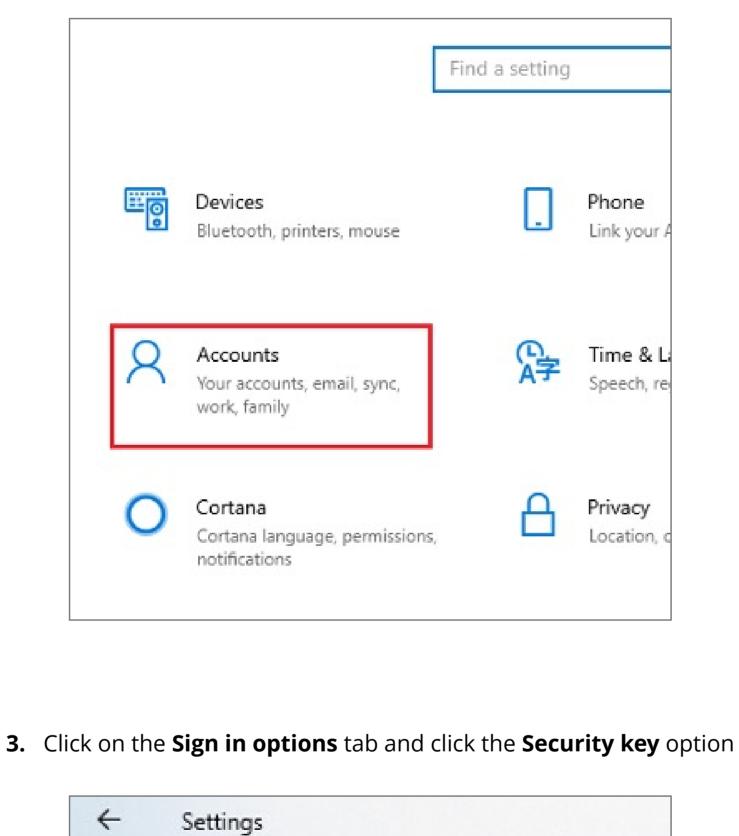

## Home

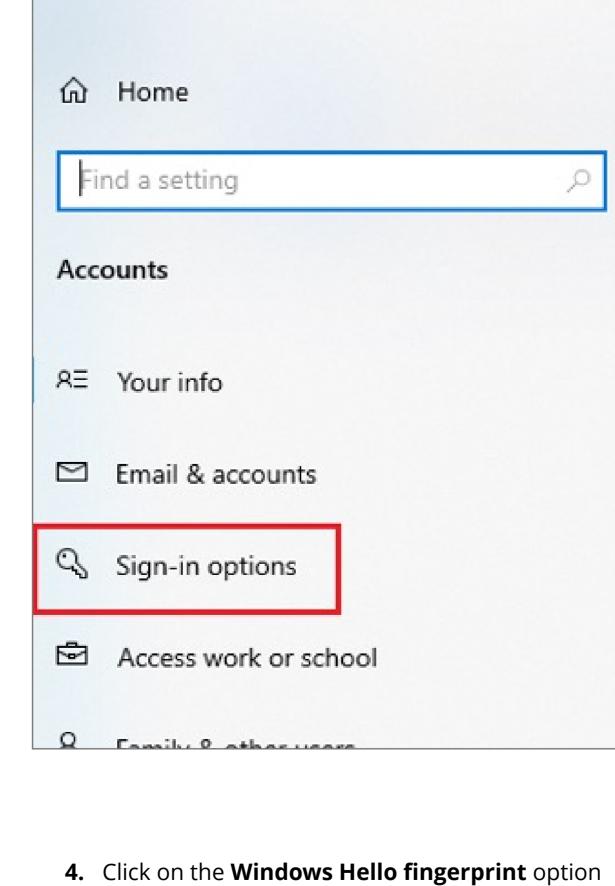

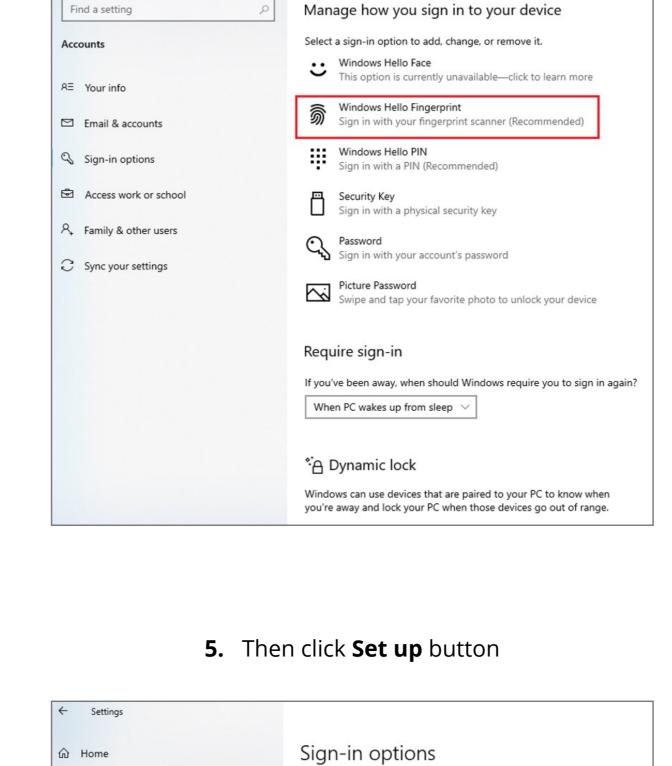

Sign-in options

ŵ Home

Find a setting

Accounts

R≡ Your info

Email & accounts

Learn more


## Sign in with your fingerprint scanner (Recommended) You can sign in to Windows, apps, and services by teaching Windows to recognize your fingerprint.

Manage how you sign in to your device

• Windows Hello Face
This option is currently unavailable—click to learn more

Select a sign-in option to add, change, or remove it.


Windows Hello Fingerprint

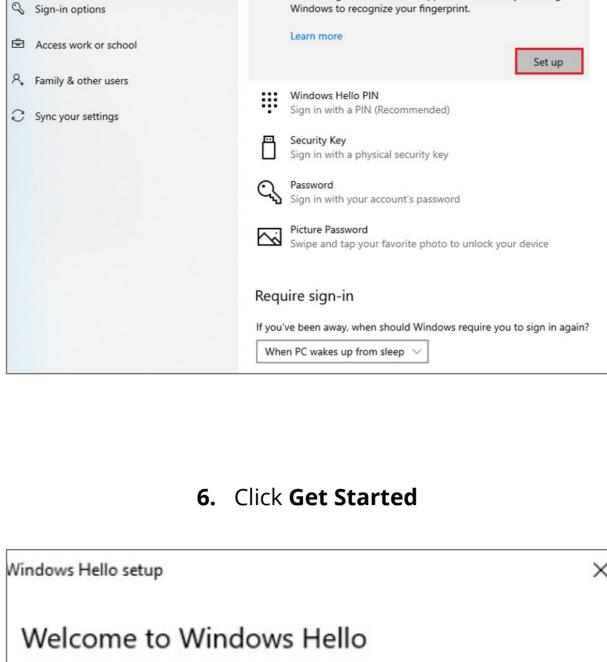


Your device just got more personal. Say goodbye to entering


complex passwords and start using your fingerprint to unlock

your device, verify your identity, and buy things in the Store.

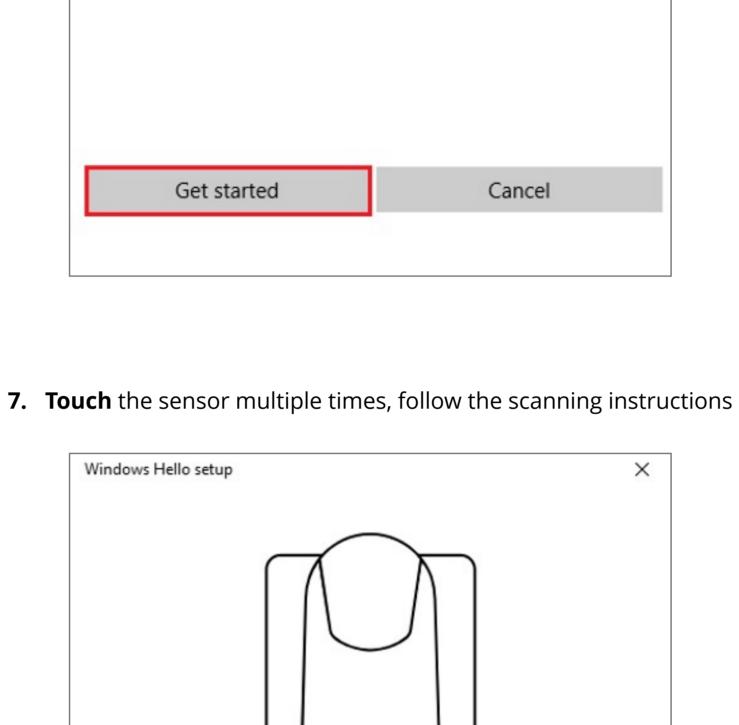

# Touch the fingerprint sensor

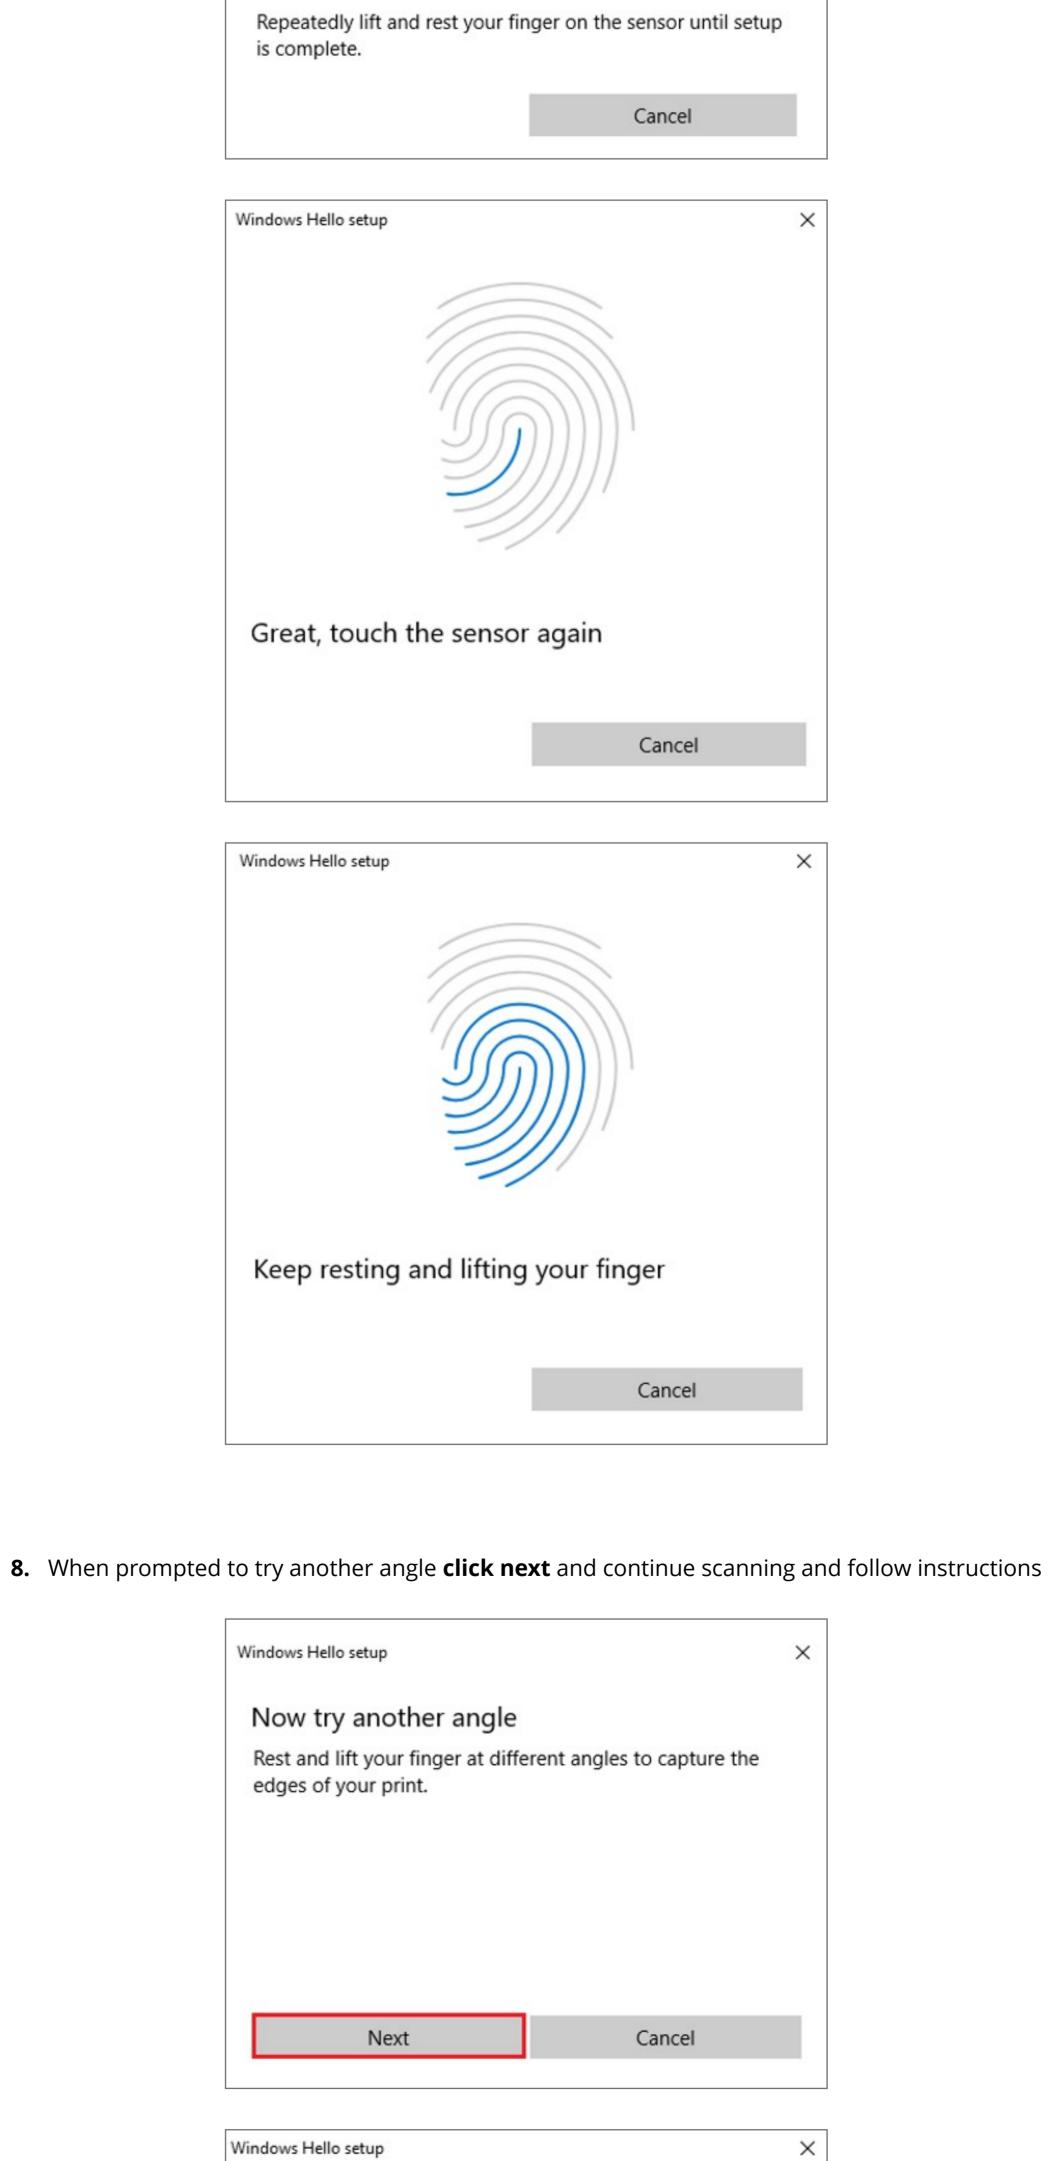

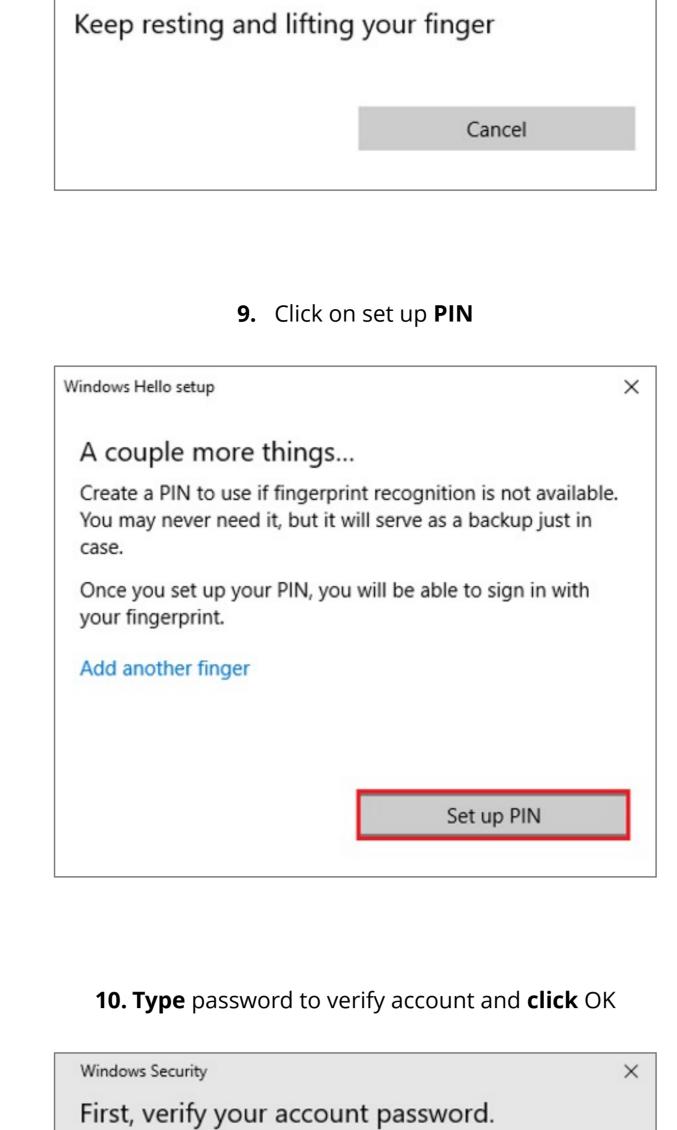

DESKTOP-TC1NJO2\HomeTV

\*\*\*\*\*\*

OK

Windows Security

₩

Set up a PIN

••••


••••

Include letters and symbols


# Create a PIN to use in place of passwords. Having a PIN makes it easier to sign in to your device, apps, and services.

**11. Type** a PIN and **click** ok

Cancel

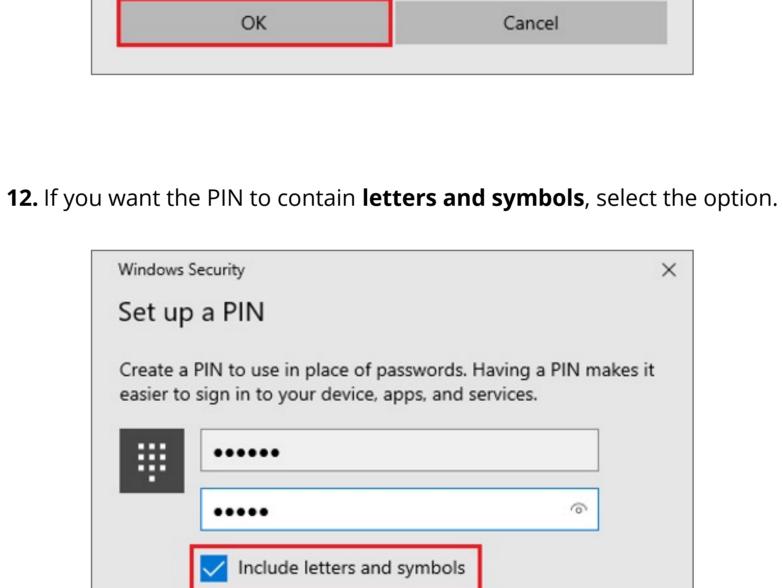

## May include lowercase letters May include digits May include special characters Can't be a number pattern (such as 123456 or

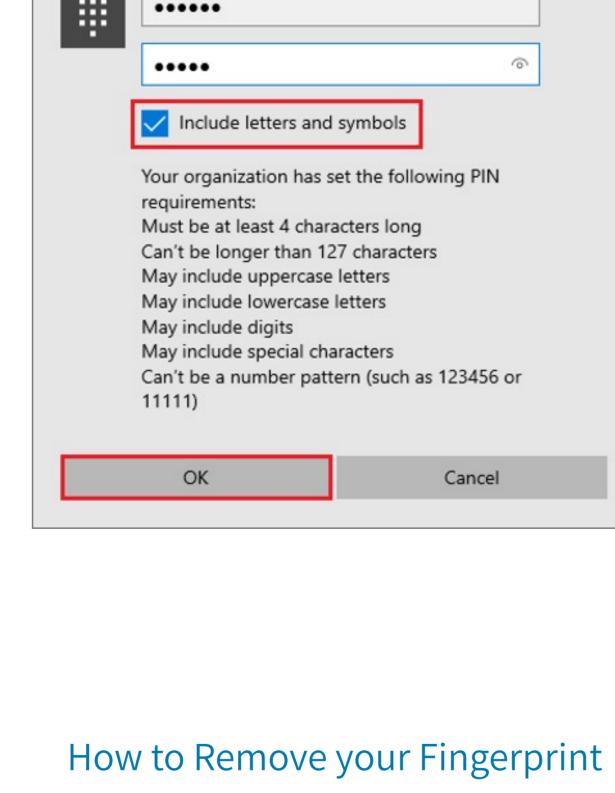

## Sign-in options Manage how you sign in to your device

1. To remove finger print click **Remove** under Windows Hello Fingerprint options.

