# Kensington

# VeriMark<sup>™</sup> Setup Guide


Kensington takes pride in making our comprehensive installation guides easy to follow with simple illustrations and step-by-step instructions. This guide will walk you through setup and help you get to know your VeriMark<sup>™</sup>.




Please update operating system (Windows 10) before setting up Verimark. If using an online service for WebAuthn make sure you use the latest browser version (Edge, Chrome, Safari and Firefox.)

## VeriMark™ Windows Hello Setup Guide

1. Select and click the START icon and select Settings

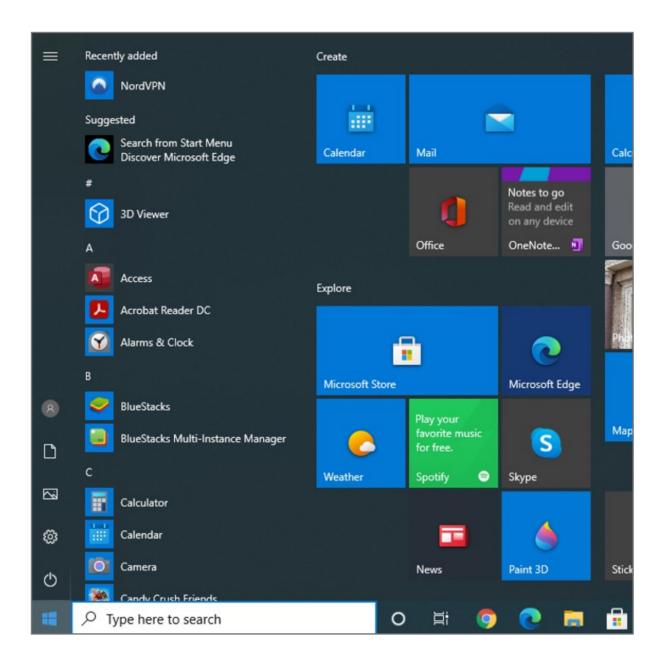


#### 2. Select Accounts

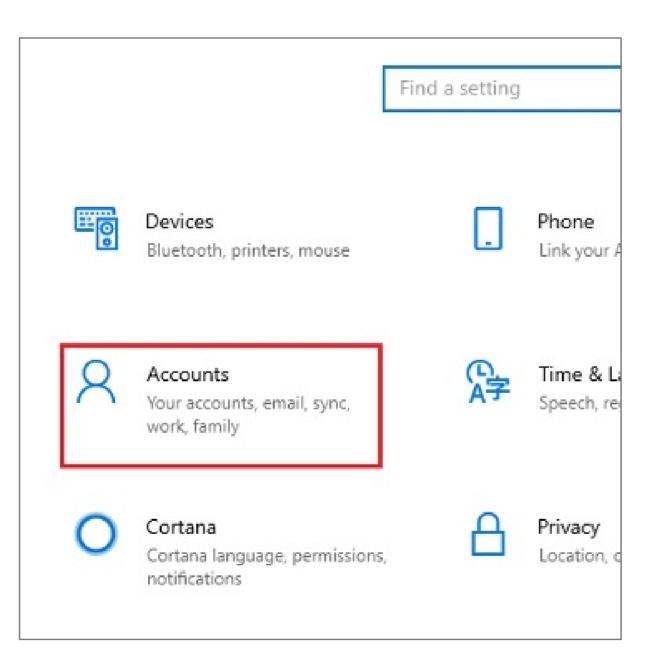


3. Click on the Sign in options tab

← Settings	
வ் Home	
Find a setting	9
Accounts	
R≡ Your info	
🖾 Email & accounts	
🔍 Sign-in options	
Access work or school	
Q Family & ather users	

4. Click on the Windows Hello fingerprint option

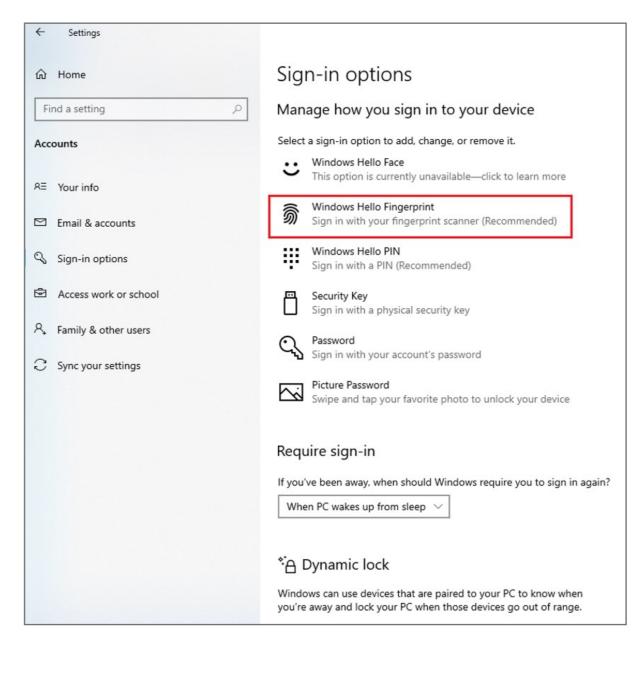


#### 5. Then click Set up button

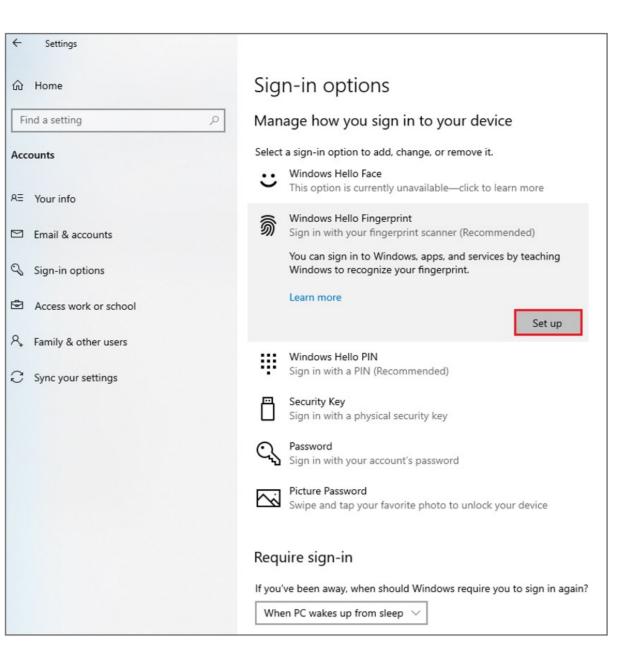

#### 6. Click Get Started

Hello
onal. Say goodbye to entering sing your fingerprint to unlock , and buy things in the Store.

7. Touch the sensor multiple times, follow the scanning instructions

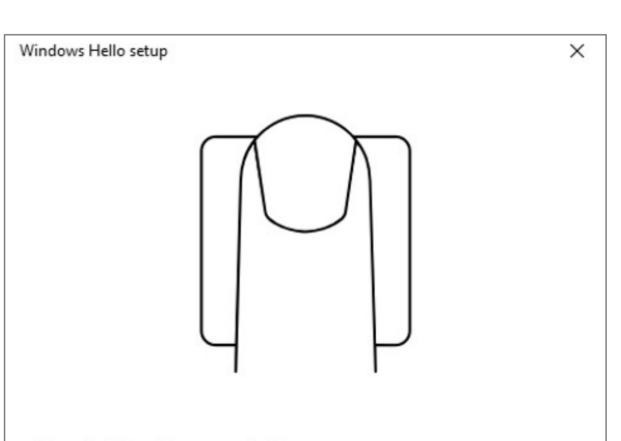

Touch the fingerprint sensor

	Cancel	
Windows Hello setup		>
1		
11		
1	(m))))	
	2//	
Great, touch the se	ensor again	
	5	
	Cancel	
	Cancer	
Windows Hello setup		×
1/		
11		
5	(M))))	
	$\mathcal{D}$	
	$\mathcal{D}$	
	$\mathcal{D}$	
Keep resting and li	fting your finger	
Keep resting and li	fting your finger	

8. When prompted to try another angle **click next** and continue scanning and follow instructions

Windows Hello setup	×
Now try another angle Rest and lift your finger at different angles to capture the edges of your print.	ne
Next Cancel	
Windows Hello setup	×
Keep resting and lifting your finger	
Cancel	

9. Click on set up **PIN** 

Windows Hello setup	×
A couple more things	
Create a PIN to use if fingerprint rec You may never need it, but it will ser case.	-
Once you set up your PIN, you will b your fingerprint.	be able to sign in with
Add another finger	
	Set up PIN

Windows Security		×	
First, v	erify your accour	nt password.	
Я	DESKTOP-TC1NJO2\H	omeTV	
	OK	Cancel	

11.1	Гуре	a PIN	and	click	ok
	ノドー	• • • • • •	••••••		

Windows S	ecurity		×
Set up	a PIN		
	PIN to use in place of pas sign in to your device, ap	swords. Having a PIN make ps, and services.	s it
	••••		
•			
	••••	6	
	Include letters and s	ymbols	
	ОК	Cancel	

**12.** If you want the PIN to contain **letters and symbols**, select the option.

	a PIN to use in place of pass to sign in to your device, app	_	es it
	•••••		
•			
	•••••	ି	
	Include letters and s	ymbols	
	Your organization has set	the following PIN	
	requirements:	,, <u>,</u>	
	Must be at least 4 charac	ters long	
	Can't be longer than 127		
	May include uppercase le		
	May include lowercase le May include digits	tters	
	May include special chara	acters	
	Can't be a number patter		
	11111)		

### How to Remove your Fingerprint

**1.** To remove finger print click **Remove** under Windows Hello Fingerprint options.

Sig	n-in options
Man	age how you sign in to your device
Select	a sign-in option to add, change, or remove it.
÷	Windows Hello Face This option is currently unavailable—click to learn more
5	Windows Hello Fingerprint Sign in with your fingerprint scanner (Recommended)
	You're all set up to sign in to Windows, apps, and services with your fingerprint.
	Learn more
	Add another Remove
Ψ	Windows Hello PIN Sign in with a PIN (Recommended)
	Security Key Sign in with a physical security key
ପ୍ତ	Password Sign in with your account's password
	Picture Password Swipe and tap your favorite photo to unlock your device
	uire sign-in ve been away, when should Windows require you to sign in again?
	en PC wakes up from sleep $\checkmark$