

ComputerDisk drivesDisplay adaptersFirmware

Keyboards

Monitors
Network adapters
Print queues
Processors
Security devices
Sensors


Human Interface Devices

Software componentsSoftware devices

Storage controllers

Mice and other pointing devices

Sound, video and game controllers

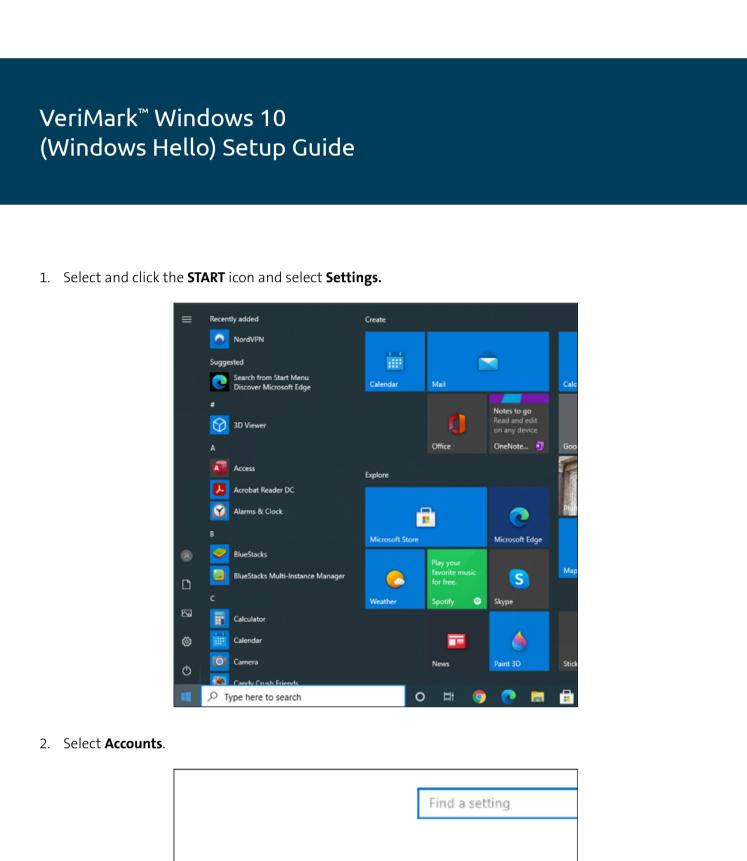

← Settings

3. Click on the **Sign in options** tab.

Devices

Accounts

work, family

Cortana

Find a setting

Your info

Email & accounts

Sign-in options

Access work or school

Sign-in options

• Windows Hello Face

Manage how you sign in to your device Select a sign-in option to add. change, or remove it.

This option is currently unavailable—click to learn more

Accounts

RΞ

4. Click on the Windows Hello fingerprint option.

 notifications

Bluetooth, printers, mouse

Your accounts, email, sync,

Cortana language, permissions,

Phone


Link your A

Time & L

Speech, re

Privacy

Location, o

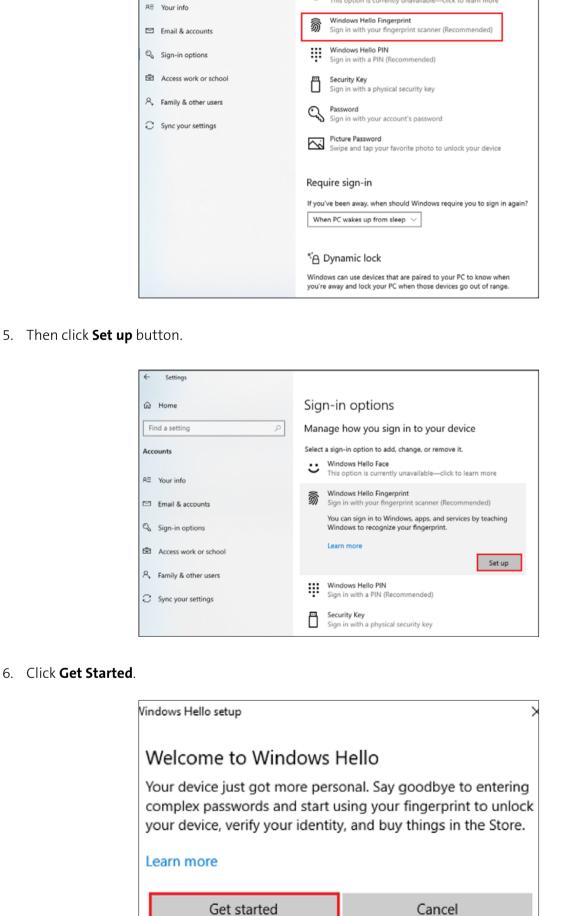

case.

Once you set up your PIN, you will be able to sign in with your fingerprint.

Add another finger

First, verify your account password.

DESKTOP-TC1NJO2\HomeTV

Create a PIN to use in place of passwords. Having a PIN makes it

easier to sign in to your device, apps, and services.

Include letters and symbols

OK

A couple more things...

Create a PIN to use if fingerprint recognition is not available. You may never need it, but it will serve as a backup just in

Windows Hello setup

10. **Type** password to verify account and **click** OK.

11. Type a PIN and click ok.

Windows Security

Windows Security

Set up a PIN

Cancel

7. Touch the sensor multiple times, follow the scanning instructions.

Windows Hello setup

Great, touch the sensor again

8. When prompted to try another angle **click next** and continue scanning and follow instructions.

×

Cancel

Windows Hello setup

Windows Hello setup

Keep resting and lifting your finger

Set up PIN

Cancel

×

Cancel

Keep resting and lifting your finger

Windows Hello setup

Touch the fingerprint sensor

Windows Hello setup

edges of your print.

Now try another angle


Next

9. Click on set up **PIN**.

Repeatedly lift and rest your finger on the sensor until setup

Cancel

Rest and lift your finger at different angles to capture the

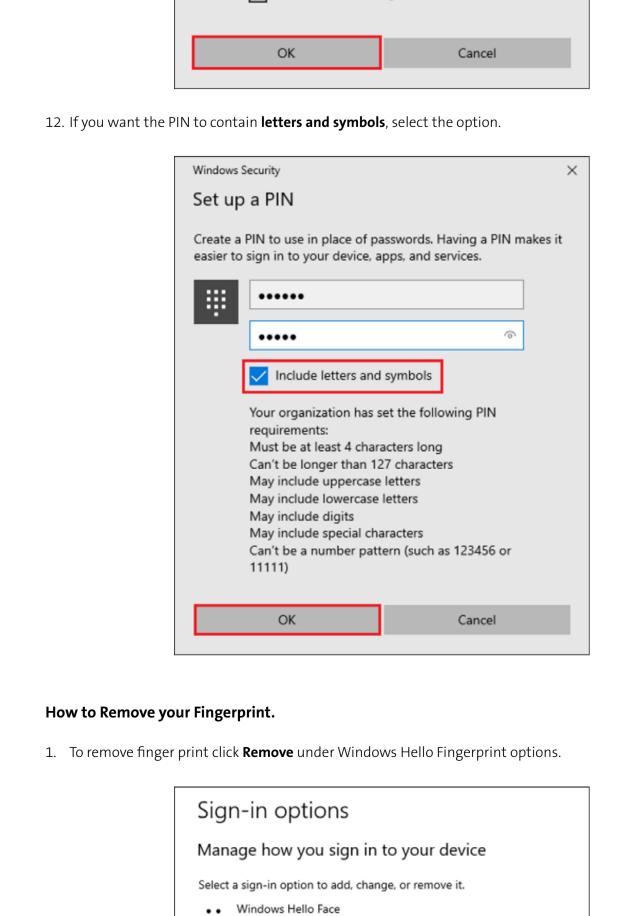

Sign in with your fingerprint scanner (Recommended)
You're all set up to sign in to Windows, apps, and services with your fingerprint.

Learn more

Add another

Remove

Windows Hello PIN
Sign in with a PIN (Recommended)

Security Key
Sign in with a physical security key

Password
Sign in with your account's password

Picture Password
Swipe and tap your favorite photo to unlock your device

Kensington

The Professionals' Choice™

This option is currently unavailable—click to learn more

Windows Hello Fingerprint

All specifications are subject to change without notice. Products may not be available in all markets. Kensington and the ACCO name and design are registered trademarks of ACCO Brands. Kensington The Professionals' Choice is a trademark of ACCO Brands.

All other registered and unregistered trademarks are the property of their respective owners. © 2023 Kensington Computer

Products Group, a division of ACCO Brands. All rights reserved.

FOR MORE INFORMATION CONTACT: 1-855-692-0054 | sales@kensington.com