Windows Installation Process

1. Download DockWorks from https://www.kensington.com/dockworks/
2. Locate the file and double-click it to launch the installation process. The first snapshot is as follows, just select ‘Next’ to go forward.

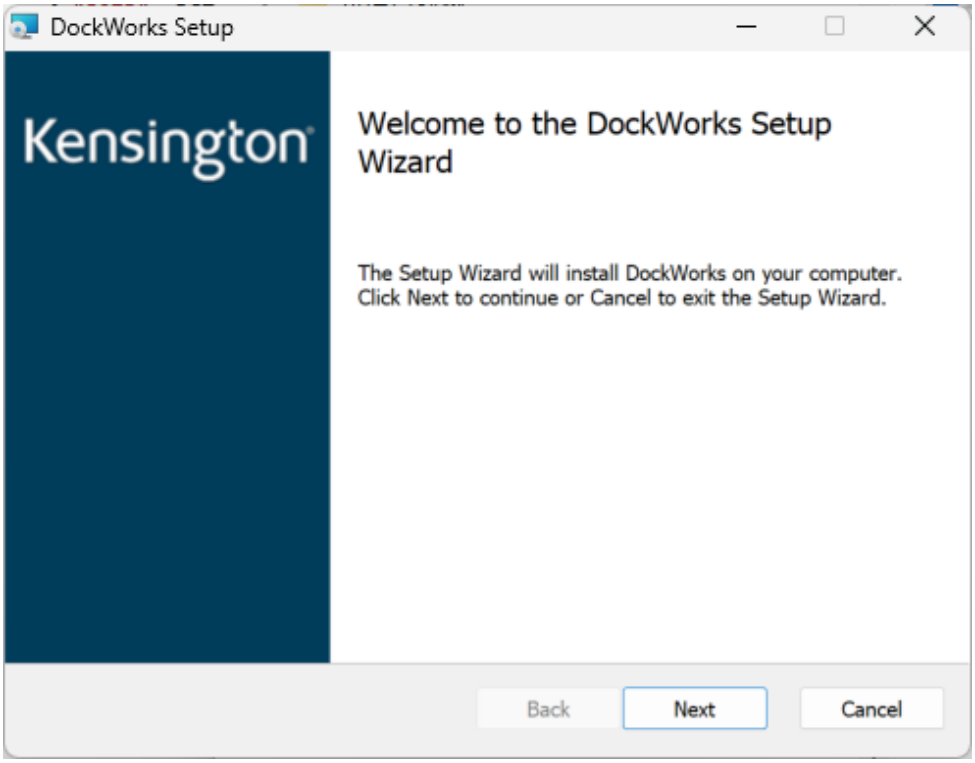

3. Read and agree to the license agreement, then select ‘Next’.

4. Select whether you want to enable Auto-Switch by default or not, then select ‘Next’.

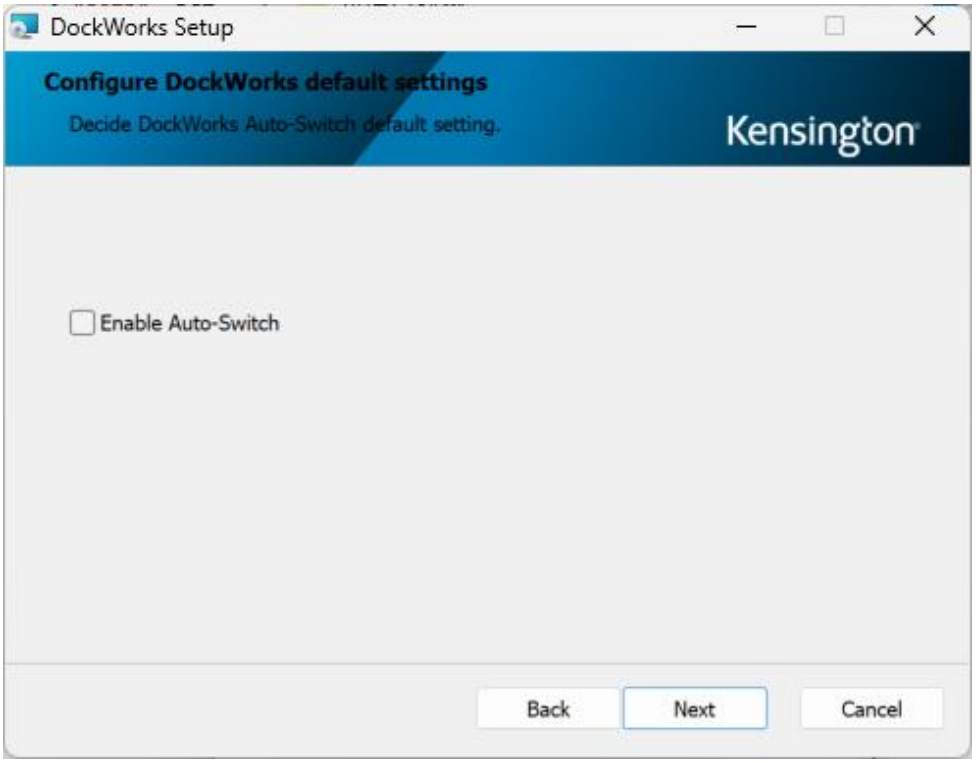

5. Select ‘Install’ to begin the installation.

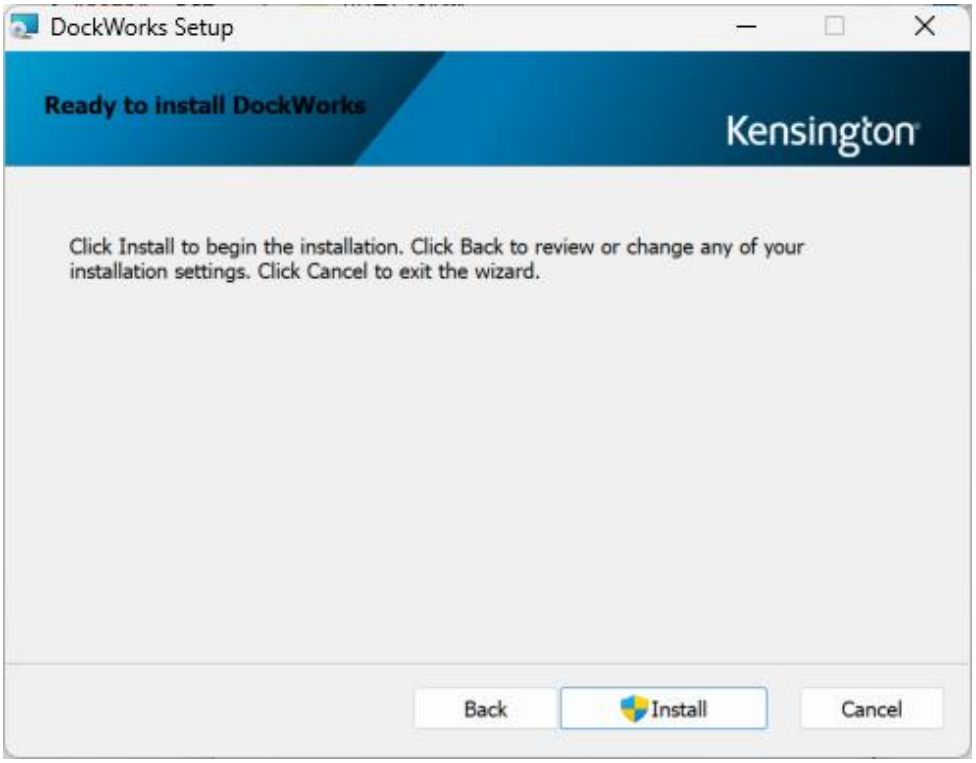

6. If prompted with “Do you want to allow the following program to make changes to this computer?” select ‘Yes’.

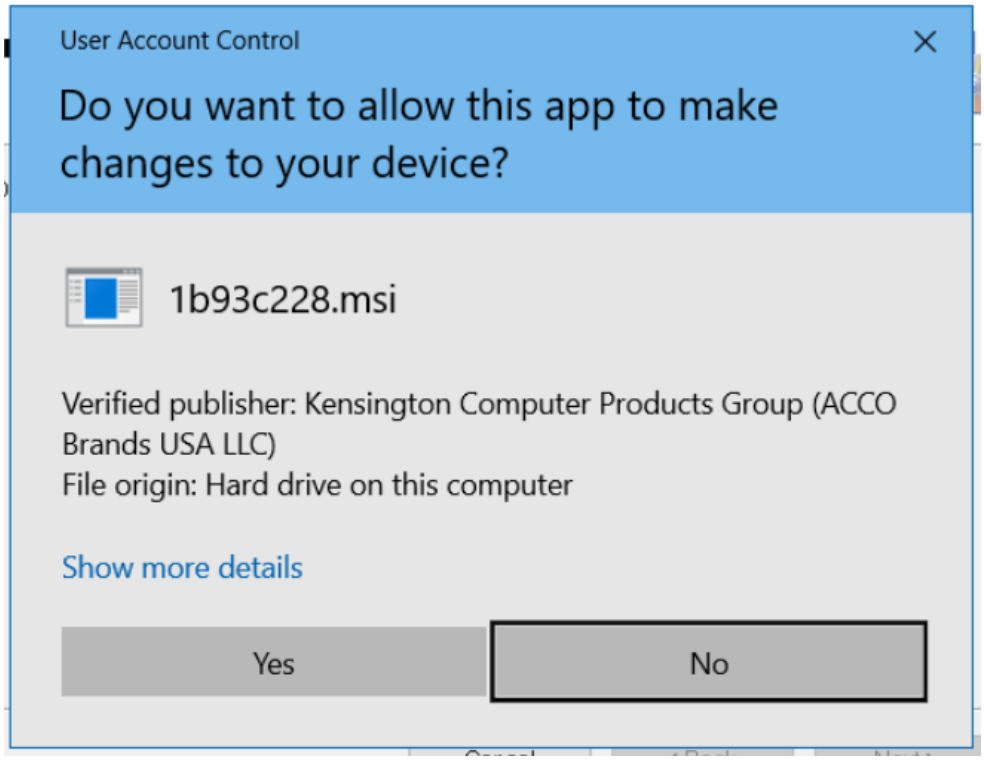

*The wording ‘1b93c228’ is a random string generated by system.

7. The installation process may take a few seconds to complete.

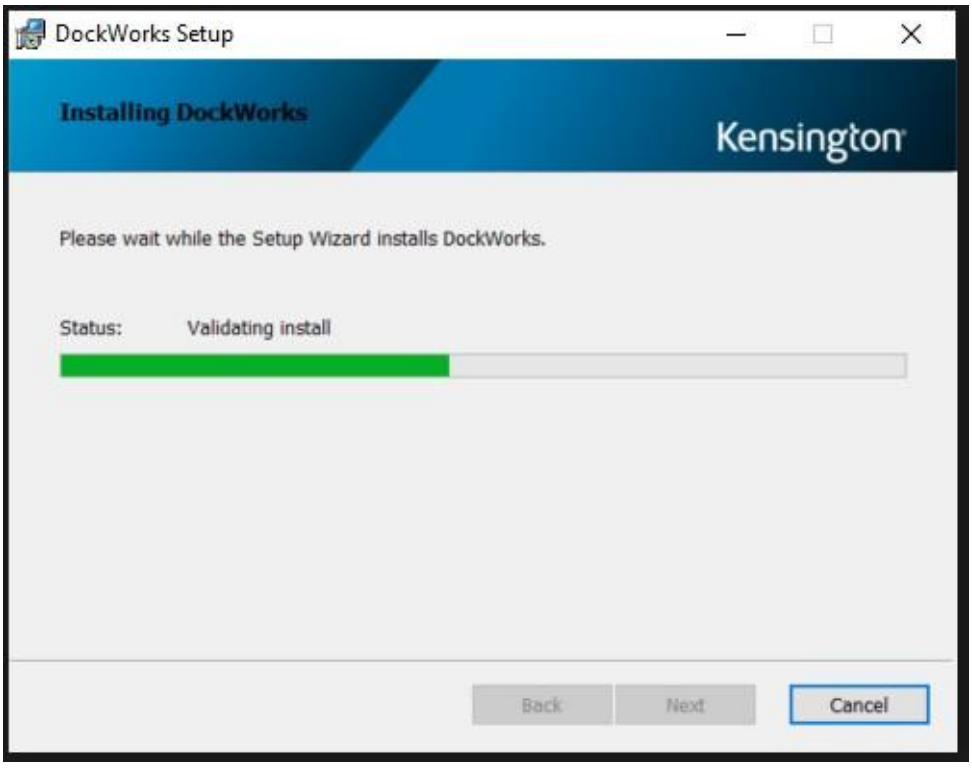

8. A message is provided letting you know that DockWorks has completed its installation process. Click ‘Finish’ to complete the installation.

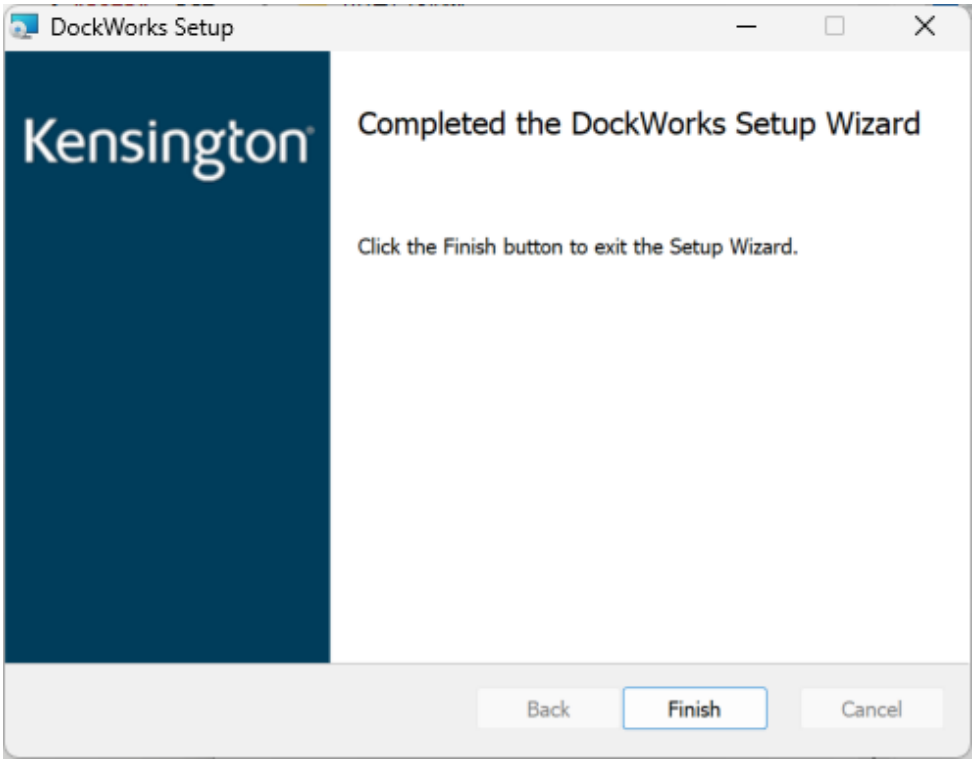

9. DockWorks is now installed on your computer and can be accessed via the Task Tray, or via Start → All Programs → Kensington → Kensington DockWorks

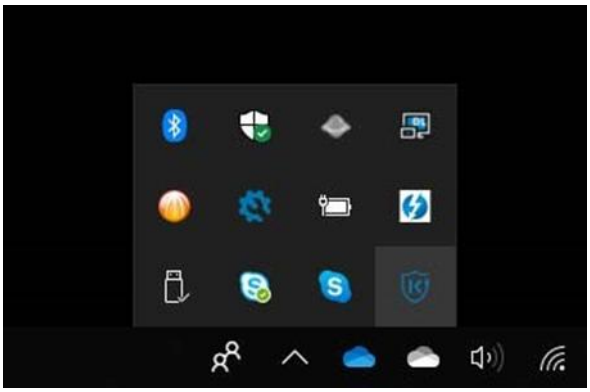

10. With DockWorks installed, you can:

- Enable (green) or Disable (red): WiFi Auto-Switch
  - WiFi Auto Switch allows the dock to prioritize LAN (Ethernet) over WiFi when you are docked. When you undock, the laptop will resume using WiFi.
    Note: Switch from ethernet to WiFi can take up to 1 min depending on computer.
- Enable (green) or Disable (red): MAC Address Passthrough
  - MAC Address Passthrough allows the docking station to mirror the Laptop's ethernet NIC (Network Interface Card) MAC ID.
- About DockWorks
  - Informs you of the latest version installed, as well as lets you check if a newer version is available.
- Export log
  - Export log files as zip with timestamp naming to selected folder. DockWorks will remember user's preference path for next export action.
- Exit
  - Allows you to close DockWorks

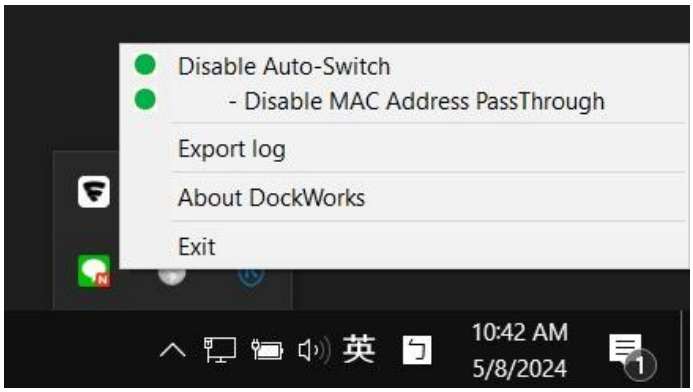

Note:

- When a Kensington docking station is not connected, the WiFi Auto-Switch and MAC Address Passthrough features are locked.

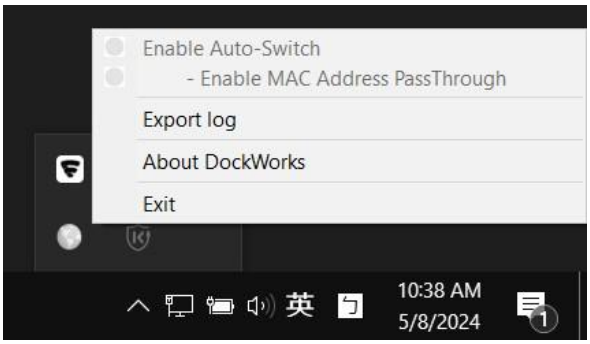

- MAC Address Passthrough is locked when WiFi Auto-Switch is in the off status.

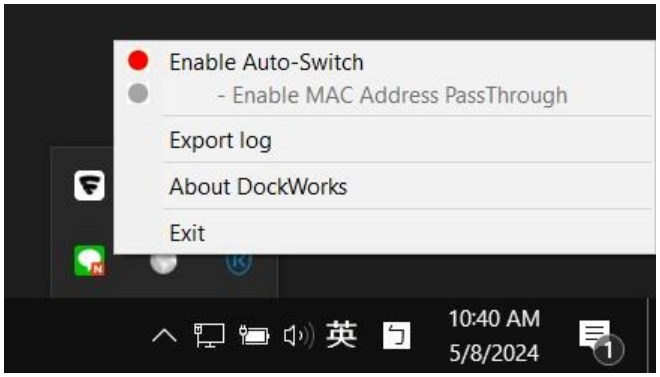
Enable Auto-Switch
- Enable MAC Address PassThrough
Export log
About DockWorks
Exit
英
10:40 AM
5/8/2024