



Windows Kensington Fingerprint Provisioning Tool

1. Download the Windows fingerprint tool from the [support site](#)
2. Double click the ctapfma-2.0.5-setup.exe file to install the tool.
(Make sure you are **running as administrator** to provision the fingerprint on the dongle)
 - a. The “Ctapfma” tool will be added as a shortcut on the desktop.
3. Right click and select **run as administrator** with the dongle **connected** to a USB port

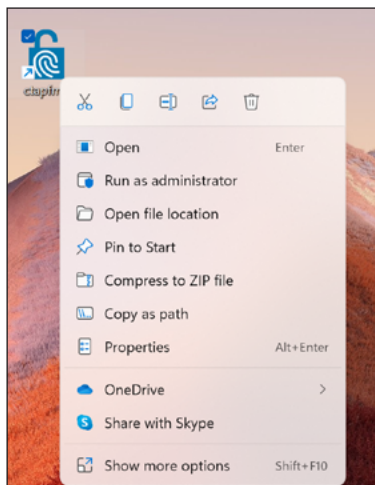


- a. If the tool is **not** executed as admin **or** dongle is not connected to the device the following message will be displayed. **Exit** the tool and repeat **step 3**

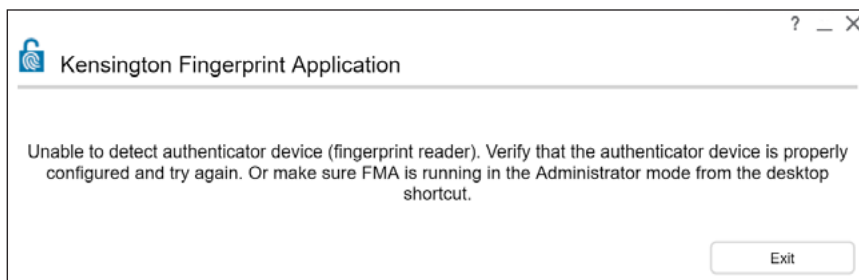


Windows Kensington Fingerprint Provisioning Tool


4. After running the tool as administrator, it will ask you to **create a PIN** only if you haven't created one for sign in options. If you have, continue to step 5

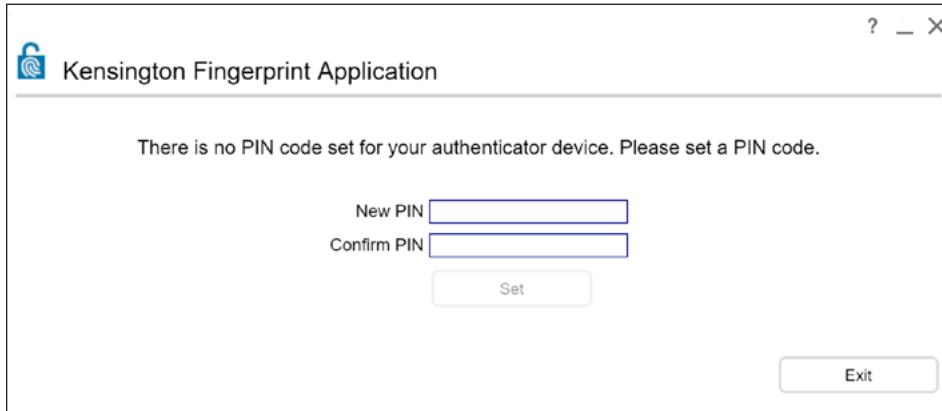

5. Enter your PIN to begin **registering** your fingerprints on the VeriMark dongle.

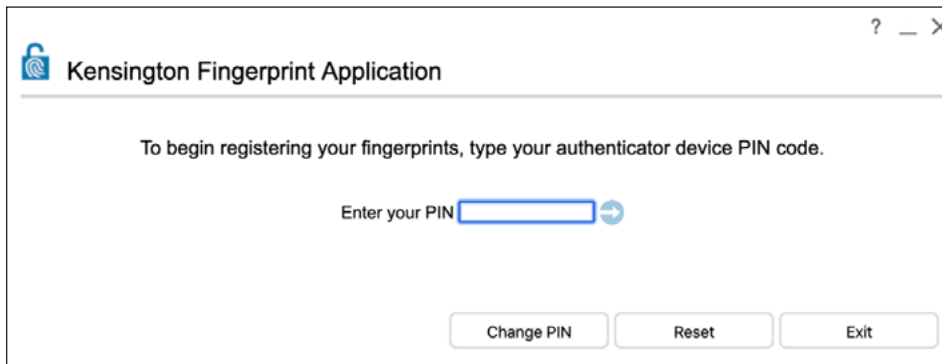


6. You can also **reset** the dongle

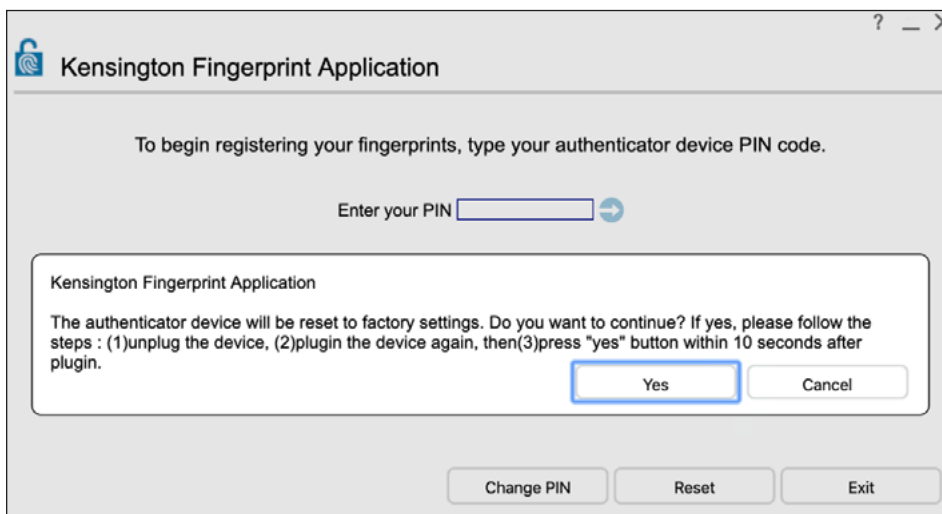


Windows Kensington Fingerprint Provisioning Tool


7. Or change your previously saved PIN

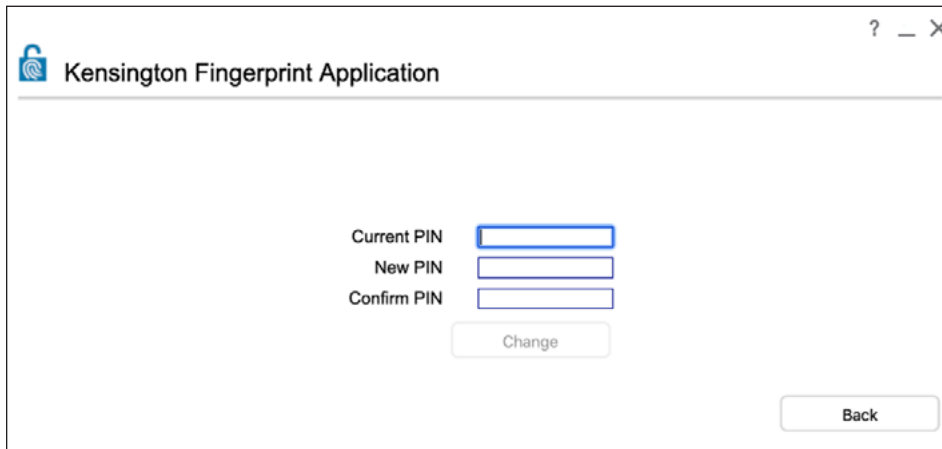

8. Click on the blue arrow next to the PIN to begin fingerprint registration process

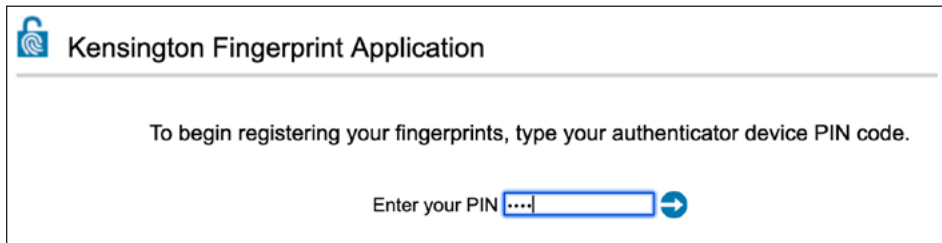


9. Select the fingerprint you want to enroll and Tap the sensor area multiple times until the fingerprint enrollment is completed. Follow screen instructions

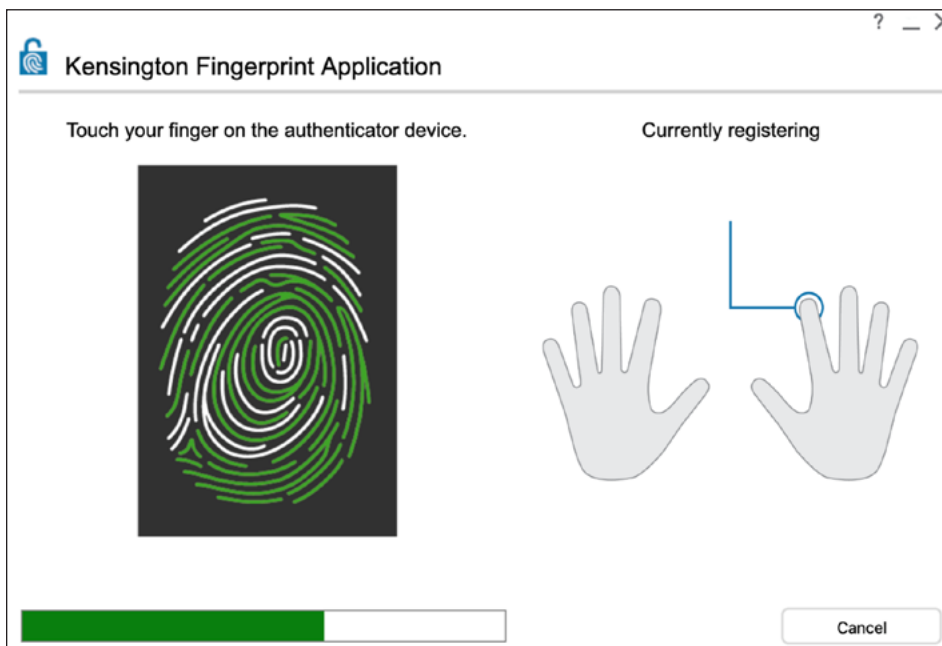

Windows Kensington Fingerprint Provisioning Tool

10. The tool will display the following window once a **successful** fingerprint enrollment is done. Click **Ok** and repeat **step 13** to **add another finger**

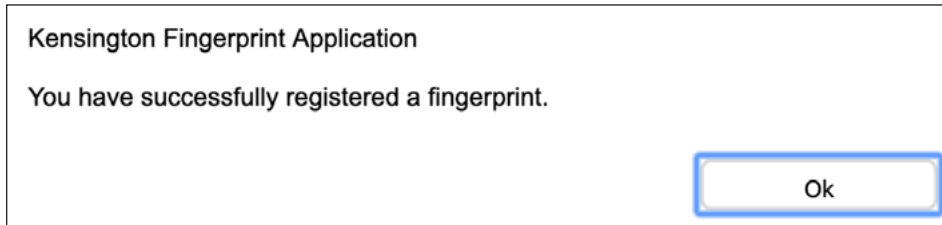

11. Once the fingerprint enrollment finish. The tool will display a window showing which fingers have been enrolled. You can also **remove all** or simple **close** the tool to **finish enrollment**.

